9.3 CONTROL PANEL SECTION

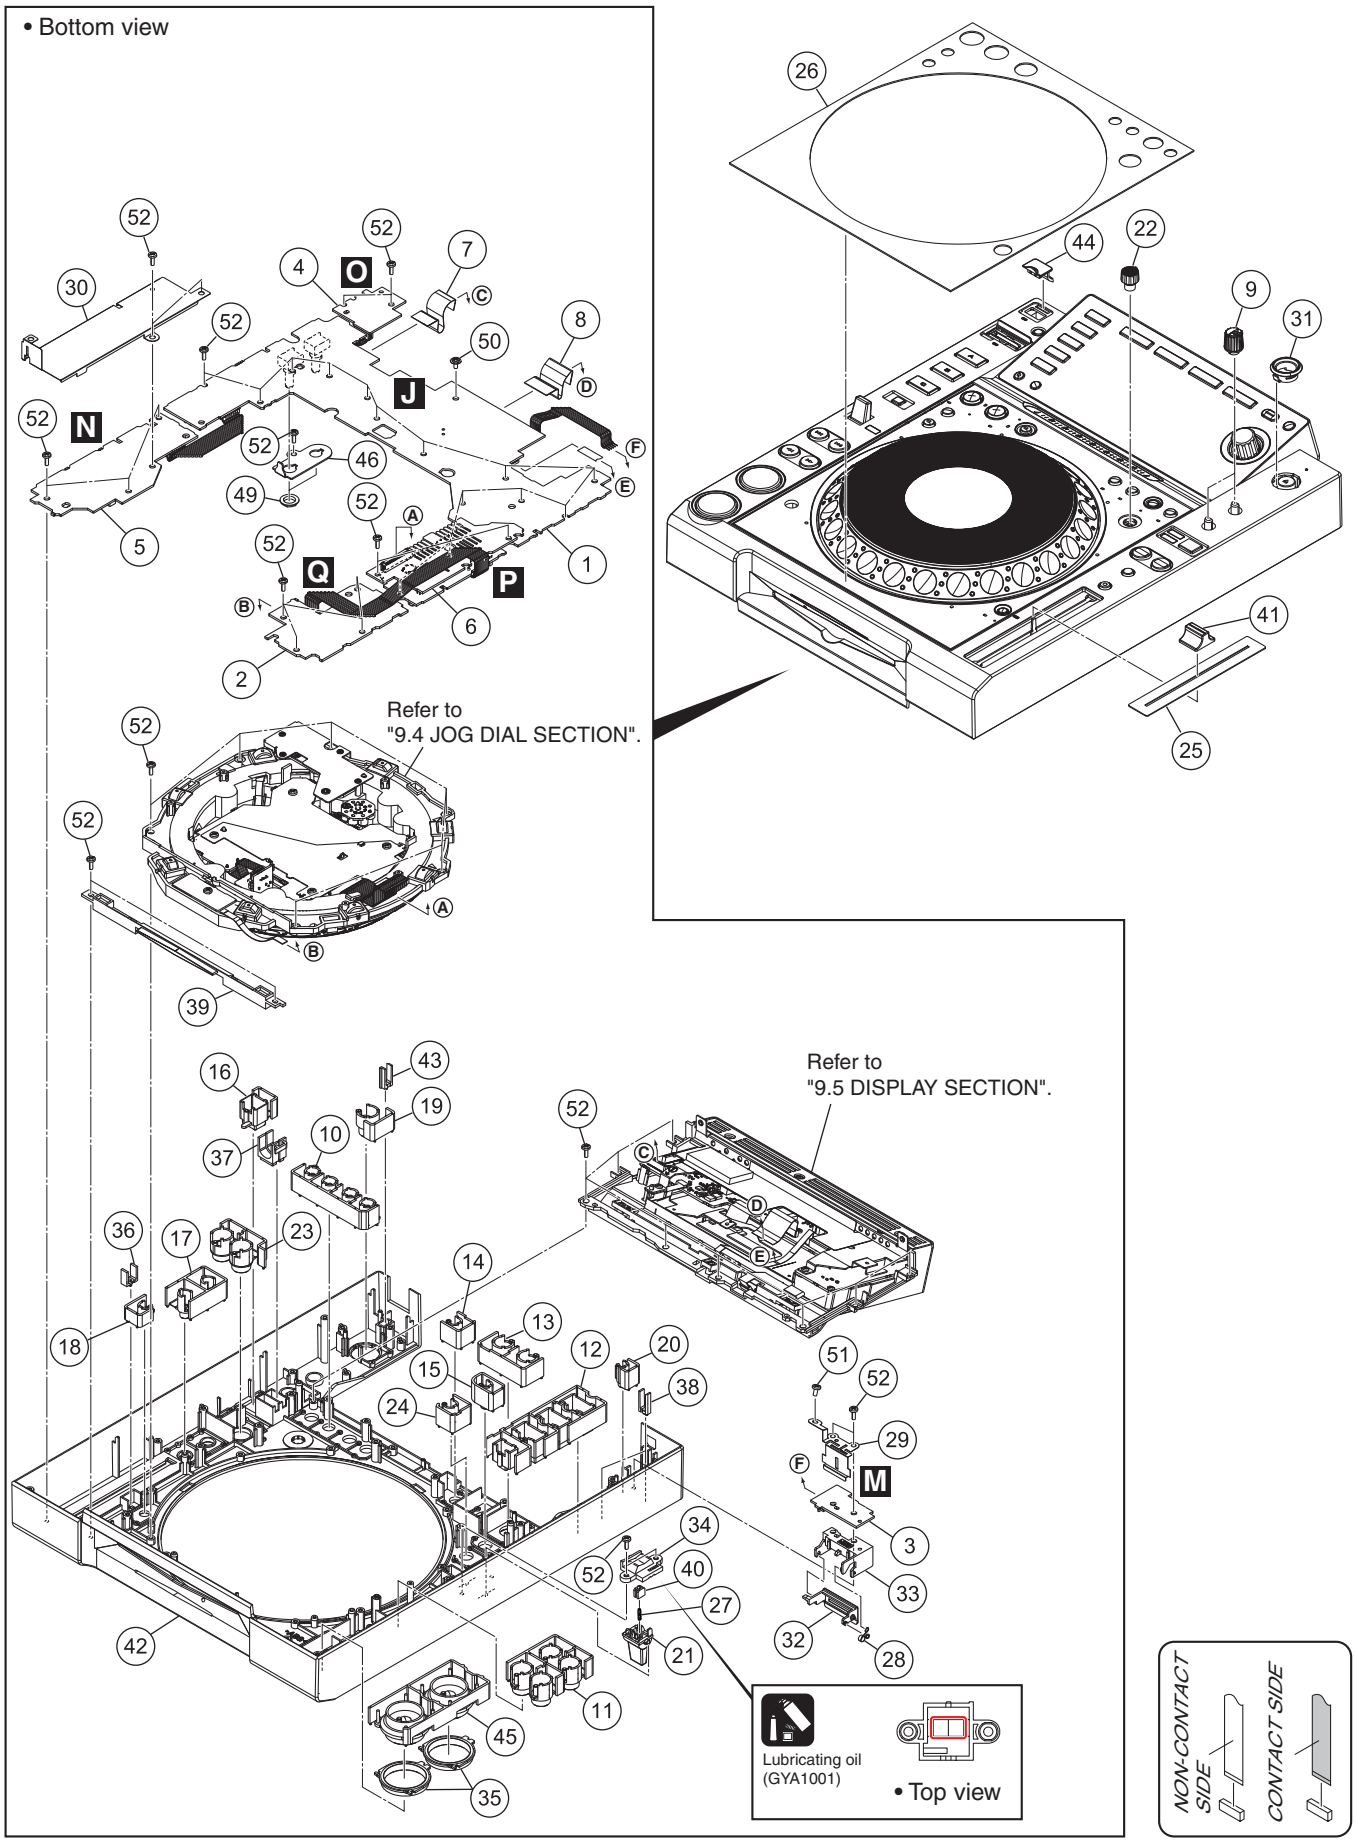

CONTROL PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	PNLB Assy	DWX3338
	2	KSWB Assy	DWX3339
	3	SDSW Assy	DWX3340
	4	EUPB Assy	DWX3341
	5	SLDB Assy	DWX3342
NSP	6	CNCT Assy	DWX3343
	7	16P FFC	DDD1483
	8	FFC/22P	DDD1609
	9	Knob	DAA1303
	10	Button (CALL)	DAC2466
	11	Button (SERCH)	DAC2468
	12	Button (HOT CUE)	DAC2469
	13	Button (LOOP)	DAC2470
	14	Button (RELOOP)	DAC2471
	15	Button (4-BEAT LOOP)	DAC2472
	16	Button (JOG MODE)	DAC2473
	17	Button (TEMPO)	DAC2474
	18	Button (TEMPO REST)	DAC2475
	19	Button (EJECT)	DAC2476
	20	Button (USB STOP)	DAC2477
	21	Lever	DAC2478
	22	Adjust Knob Black	DAC2528
	23	Button/BSY	DAC2810
	24	Button/SLP	DAC2865
	25	Slide Sheet 1C	DAH2404
	26	Panel/TOP	DAH2871
	27	Lever Spring	DBH1702
	28	Spring	DBH1717
	29	Leaf Spring/SD	DBK1375
	30	Earth Plate	DNH2849
	31	Eject Guard	DNK3958
	32	SD Card Door	DNK5308
	33	SD Door Holder	DNK5309
	34	Lever Plate	DNK5312
	35	Ring Rens (PLAY)	DNK5315
	36	Tempo Lens	DNK5316
	37	Mode Lens	DNK5317
	38	Device Lens	DNK5318
	39	Front Lens	DNK5328
	40	Lever Cap	DNK5344
	41	Knob/SLD	DNK5981
⚠	42	Control Panel	DNK6030
	43	Lens/EUP	DNK6040
	44	Cover/USB	DNK6041
	45	Button Assy/PLY	DXB2126
	46	Stay/VR	DNF1894
	47	•••••	
	48	•••••	
	49	Flange Nut M9	DBN1008
	50	Screw	ABZ30P060FTC
	51	Screw	BBZ30P060FTB
	52	Screw	BPZ30P080FNI